



TornaX

Instructions for installation and use
English

EN

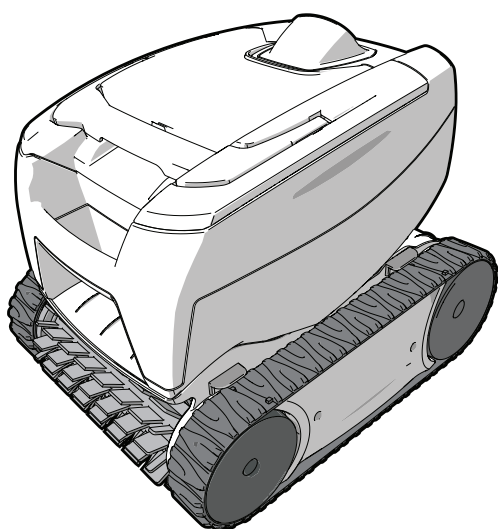

 More documents on:
www.zodiac-poolcare.com



Notes

A series of horizontal dashed lines for writing notes, arranged in a grid pattern across the page.



WARNINGS

GENERAL WARNINGS

- Failure to respect the warnings may cause serious damage to the pool equipment or cause serious injury, even death.
- The appliance is intended to be used with pools for a specific purpose; it must not be used for any purpose other than that for which it was designed.
- It is important that the appliance is operated by people who are competent and qualified (both physically and mentally), after having read the instructions for use. All persons not meeting these criteria must not approach the appliance in order to avoid exposure to dangerous elements.
- Keep the appliance out of the reach of children.
- The appliance must be installed according to the manufacturer's instructions and in compliance with local standards. The installer is responsible for installing the appliance and for compliance with national installation regulations. Under no circumstances may the manufacturer be held liable in the event of failure to comply with applicable local installation standards.
- For any work other than the simple maintenance described in this manual, the product should be referred to a qualified professional.
- Incorrect installation and/or use may cause serious damage to property or serious injuries (possibly causing death).
- All equipment, even postage and packing paid, travels at the risks and perils of the recipient. The latter shall issue reserves in writing on the carrier's delivery slip if damage is detected, caused during transport (confirmation to be sent to the carrier within 48 hours by registered letter). In the event that an appliance containing coolant has been turned on its side, mention your reservations in writing to the carrier.
- If the appliance suffers a malfunction, do not try to repair the appliance yourself, instead contact a qualified technician.
- If the power cord is damaged, it must be replaced by the manufacturer, its maintenance technician or any other qualified person so as to prevent all risks.
- Refer to the warranty conditions for details of the permitted water balance values for operating the appliance.
- Deactivating, eliminating or by-passing any of the safety mechanisms integrated into the appliance shall automatically void the warranty, in addition to the use of spare parts manufactured by unauthorised third-party manufacturers.
- Do not spray insecticide or any other chemical (flammable or non-flammable) in the direction of the appliance, as this may damage the body and cause a fire.
- Zodiac® heat pump, filtration pump and filter appliances are compatible with the most commonly used types of pool water treatment systems.
- For heat pump appliances or dehumidifiers, do not touch the fan or insert a rod or your fingers through the grid when the appliance is in operation. The fan rotates at high speed and may cause serious injuries or even death.

WARNINGS ASSOCIATED WITH ELECTRICAL APPLIANCES

- The power supply to the appliance must be protected by a dedicated 30 mA residual current device, complying with the standards and regulations in force in the country in which it is installed.
- Before carrying out any operations, check that:
 - The voltage indicated on the appliance information plate corresponds to the mains voltage.
 - The power grid is adapted to the power requirements of the appliance, and is grounded.
 - The plug (where applicable) is suitable for the socket.
- In the event of abnormal operation or the release of odours from the appliance, turn it off immediately, unplug it from its power supply and contact a professional.
- Before any intervention on the appliance, ensure that the latter is switched off and disconnected from the power supply, in addition to any other equipment connected to the appliance, and that the heating priority (where applicable) is deactivated.
- Do not disconnect and reconnect the appliance to the power supply when in operation.
- Do not pull on the power cord to disconnect it from the power supply.
- Do not handle the electrical elements with wet hands.
- Clean the terminal board or the power supply socket before connection.
- For any component or sub-assembly containing a battery: do not recharge or dismantle the battery, or throw it into a fire. Do not expose it to high temperatures or direct sunlight.
- In stormy weather, unplug the appliance to prevent it from suffering lightning damage.
- Do not immerse the appliance in water (with the exception of cleaners) or mud.

SPECIFIC FEATURES APPLICABLE TO "Pool cleaners"

- The cleaner must operate in pool water with a temperature of between 15°C and 35°C.
- To avoid possible injury or damage to the cleaner, do not operate the cleaner out of the water.
- In order to prevent possible injury, bathing is prohibited when your cleaner is in the pool.
- Do not use the cleaner during shock chlorination.
- Do not leave the cleaner unattended for an extended period.

WARNING ON THE USE OF A CLEANER IN A POOL WITH A VINYL SURFACE:

- Before installing your new cleaner, carefully inspect the lining of your pool. If the liner has eroded in some areas, or if you notice gravel, folds, roots or corrosion caused by metal beneath the liner, or if you notice that the surface (bottom and walls) is damaged, do not install the cleaner before performing the necessary repairs or before having the liner replaced by a qualified professional. The manufacturer may not be held liable in any way for damage caused to the liner.
- The surface of certain vinyl patterned surfaces can wear rapidly and the patterns disappear on contact from objects such as cleaning brushes, toys, inflatable buoys, chlorine distributors and automatic pool cleaners. The decoration on some vinyl surfaces can be scratched or worn by basic friction such as through the use of a pool brush. The colours of certain patterns can also be erased during use or when in contact with objects in the pool. The manufacturer may not be held liable for the erased patterns, wear or scratching of vinyl surfaces, which are not covered by the limited warranty.

Recycling



This symbol means that your appliance must not be thrown into a normal bin. It will be selectively collected for the purpose of reuse, recycling or transformation. If it contains any substances that may be harmful to the environment, these will be eliminated or neutralised.

Contact your retailer for recycling information.



- Avant toute action sur l'appareil, il est impératif de prendre connaissance de cette notice d'installation et d'utilisation, ainsi que du livret «sécurité et garantie» livré avec l'appareil, sous peine de dommages matériels, de blessures graves, voire mortelles, ainsi que l'annulation de la garantie.
- Keep and pass on these documents for later consultation during the appliance's service life.
- The distribution or modification of this document in any way is prohibited, without prior authorisation from Zodiac®.
- Zodiac® is constantly developing its products to improve their quality. The information contained herein may therefore be modified without notice.

CONTENTS



1 Specifications

3

1.1 | Description

3

1.2 | Technical specifications and marking

4



2 Installation

5

2.1 | Set-up

5

2.2 | Attachment to the base

5



3 Use

6

3.1 | Operating principle

6

3.2 | Pool preparation

6

3.3 | Immersing the cleaner

6

3.4 | Electricity supply connections

7

3.5 | Starting the cleaning cycle

7

3.6 | Ending the cleaning cycle

8



4 Maintenance

9

4.1 | Cleaning the filter

10

4.2 | Cleaning the propeller

10

4.3 | Replacing the brush

11

4.4 | Replacing the tracks

12



5 Troubleshooting

13

5.1 | Appliance behaviour

14

5.2 | User alerts

14




Tip: to make it easier to contact your retailer

Write down your retailer's contact details to help you find them more easily and fill in the "product" information on the back of the manual; your retailer will ask you for this information.



1 Specifications

1.1 | Description

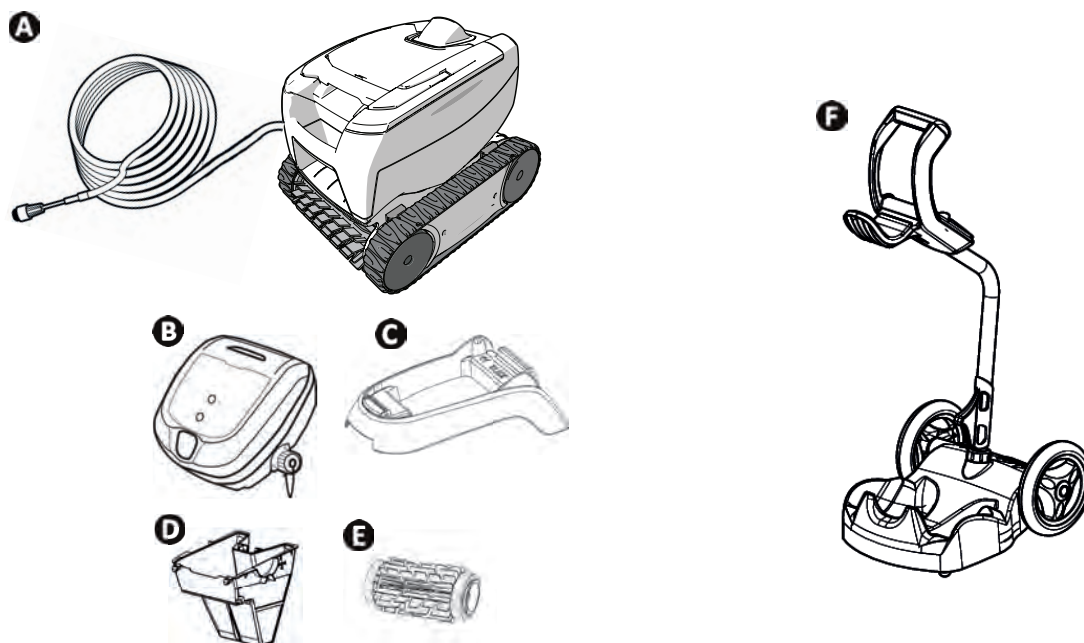

A	Cleaner + floating cable	✓
B	Control box	✓
C	Base for control box	✓
D	100µ fine debris filter	✓
	200µ large debris filter	+
	60µ very fine debris filter	+
E	Standard flap brush / Tile brush (depending on the model)	✓
	Tile brush	+
F	Caddy kit	+

✓ : Supplied + : Available as an option

Symbol	Designation	
	Starting / Stopping the appliance:	✓
	"Bottom only" cleaning (2h)	Depending on the model
	"Bottom, Walls" cleaning (2h30)	Depending on the model
	"Control" indicator	✓


✓ : Available

1.2 I Technical specifications and marking

1.2.1 Technical specifications

Control box power supply voltage	100-240 VAC, 50/60 Hz
Cleaner power supply voltage	30 VDC
Maximum power input	100 W
Cable length	14 m or 16.5 m (depending on the model)
Cleaner size (L x W x h)	37 x 29 x 30 cm
Package size (L x W x h)	56 x 37 x 38 cm
Cleaner weight	5.5 kg
Packaged weight	10.1 kg
Theoretical cleaning width	17 cm

1.2.2 Marking

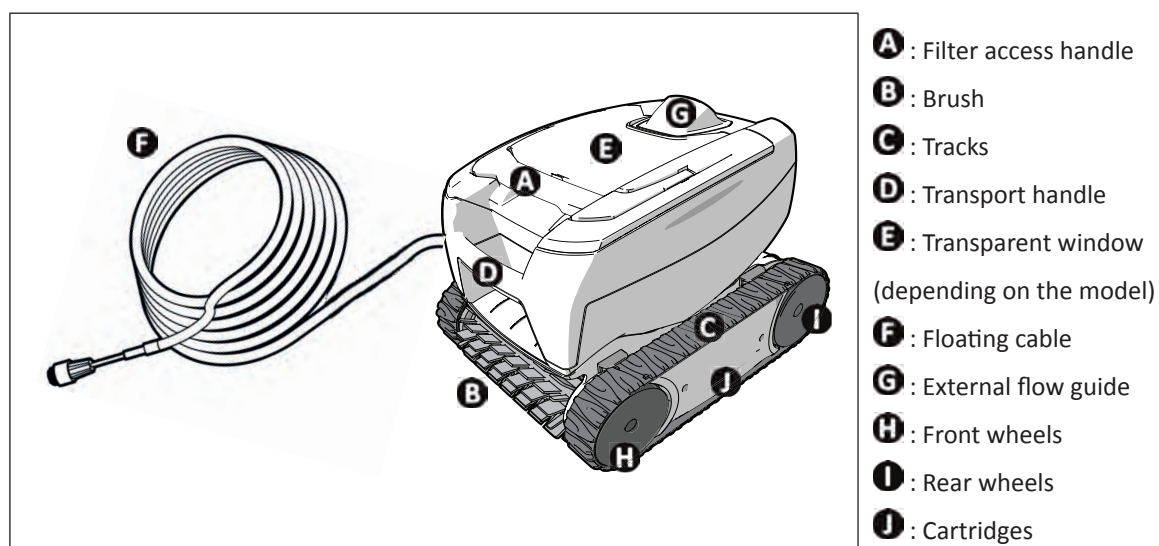

1.2.3 Product conformity

This appliance has been designed and built according to the following standards:

Low voltage directive: 2006/95/EC

Electromagnetic compatibility directive: 2004/108/EC

EN 55014-1: 2000 +A1:2001 +A2:2002; EN 55014-2: 1997 +A1:2002

EN 60335-1: 2002 + A1:2004 + A2:2006 +A11:2004 + A12:2006; EN 60335-2-41: 2003 + A1:2004

Relative to which it is compliant. The product has been tested under the normal conditions of use.

SAFETY STANDARDS:


The cleaners are classified by Intertek (ETL) as being compliant with the appropriate requirements of IEC 60335-2-41.






2 Installation

2.1 | Set-up

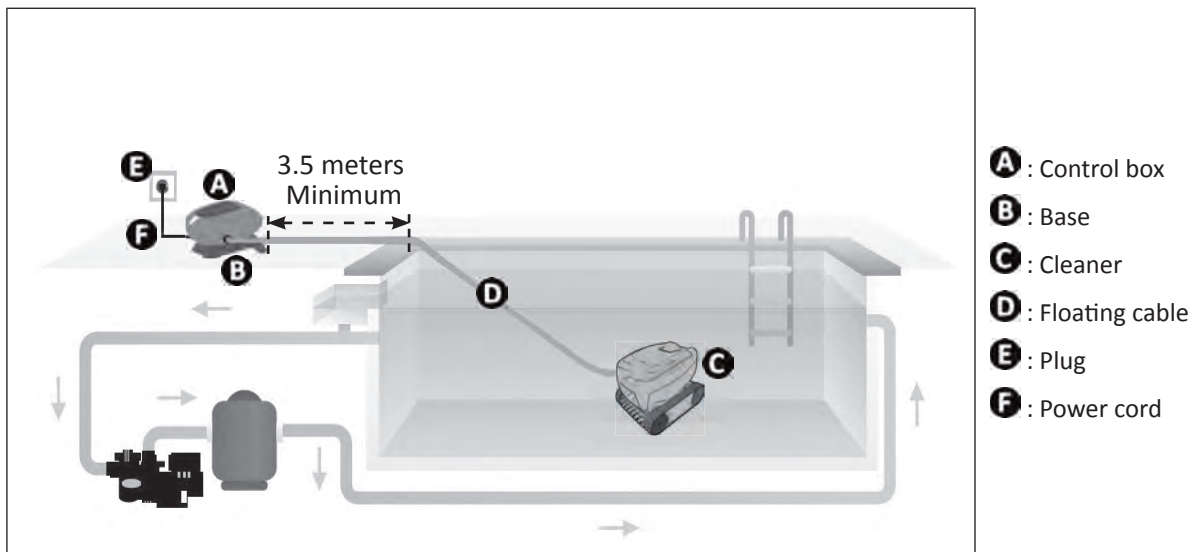

EN

2.2 | Attachment to the base

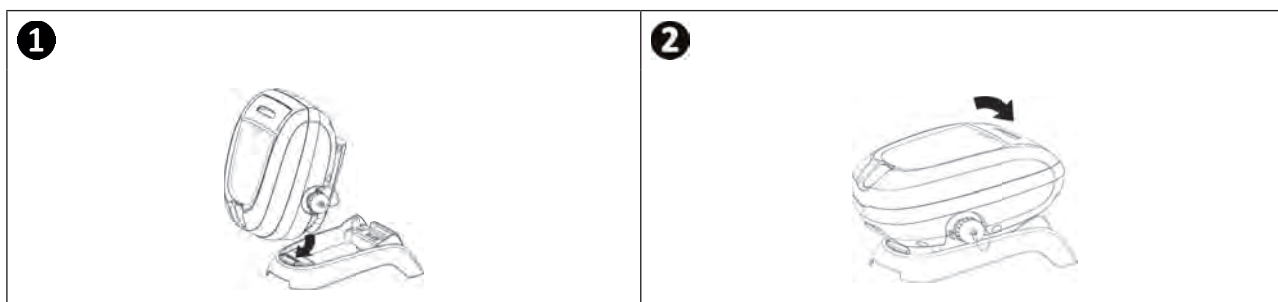



3 Use

3.1 I Operating principle

The cleaner is independent of the filtration system and can therefore operate autonomously. It just simply needs to be connected to the mains power supply.

It finds the best route to move around and clean the areas of the pool for which it has been designed (depending on the model: bottom only, bottom and walls). Debris is sucked in and stored in the cleaner's filter.

The control box is used to remotely control your cleaner and provide initial diagnostics indicators.

3.2 I Pool preparation



- **This product is intended to be used in pools which are permanently installed. Do not use it in pools which may be dismantled. A permanent pool is built into the ground or on the ground and cannot be easily dismantled and stored.**


- The appliance must operate in pool water with the following properties:

Water temperature	Between 15°C and 35°C
pH	Between 6.8 and 7.6
Chlorine	< 3 mg/l

- When the pool is dirty, especially when commissioning, remove the largest debris using a net in order to optimise the appliance's performances.
- Remove any thermometers, toys and other objects that might damage the appliance.

3.3 Immersing the cleaner

- Place as much of the floating cable as possible in the water.
- Place the cleaner into the water using the handle (see image **1**).
- Move it slightly in all directions so that the air contained in the cleaner escapes (see image **2**).
- It is essential that the appliance sinks on its own and settles on the pool bottom (see image **3**).

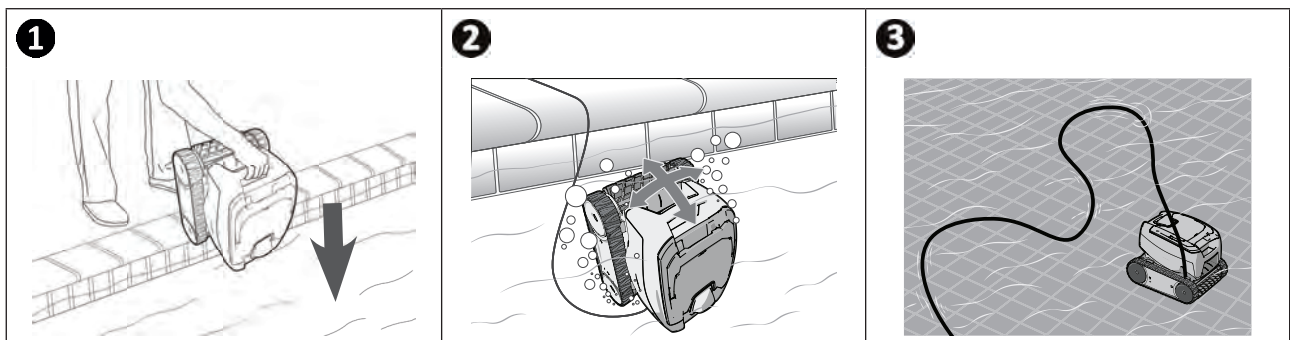


3.4 I Electricity supply connections



- Use of an electrical extension is prohibited when connecting the control box.
- Make sure that the socket can be easily accessed at all times and is protected from rain or splashes.
- The control box is splash-proof but must not be immersed. It must not be installed in a floodable area; keep it at least 3.5 metres away from the edge of the pool and avoid exposing it to direct sunlight.
- Place the control box near the socket.

- Unscrew the protective cap (see image 1).
- Connect the floating cable to the control box and lock it in place by turning the ring only in the clockwise direction (to prevent damage to the floating cable) (see image 2, 3).
- Make sure that the connector is fully pushed in so that no water can get in (see image 4).
- Connect the power cord (see image 5). Only connect the control box to a power outlet protected by a 30 mA maximum residual current device (**if in doubt contact a qualified technician**).

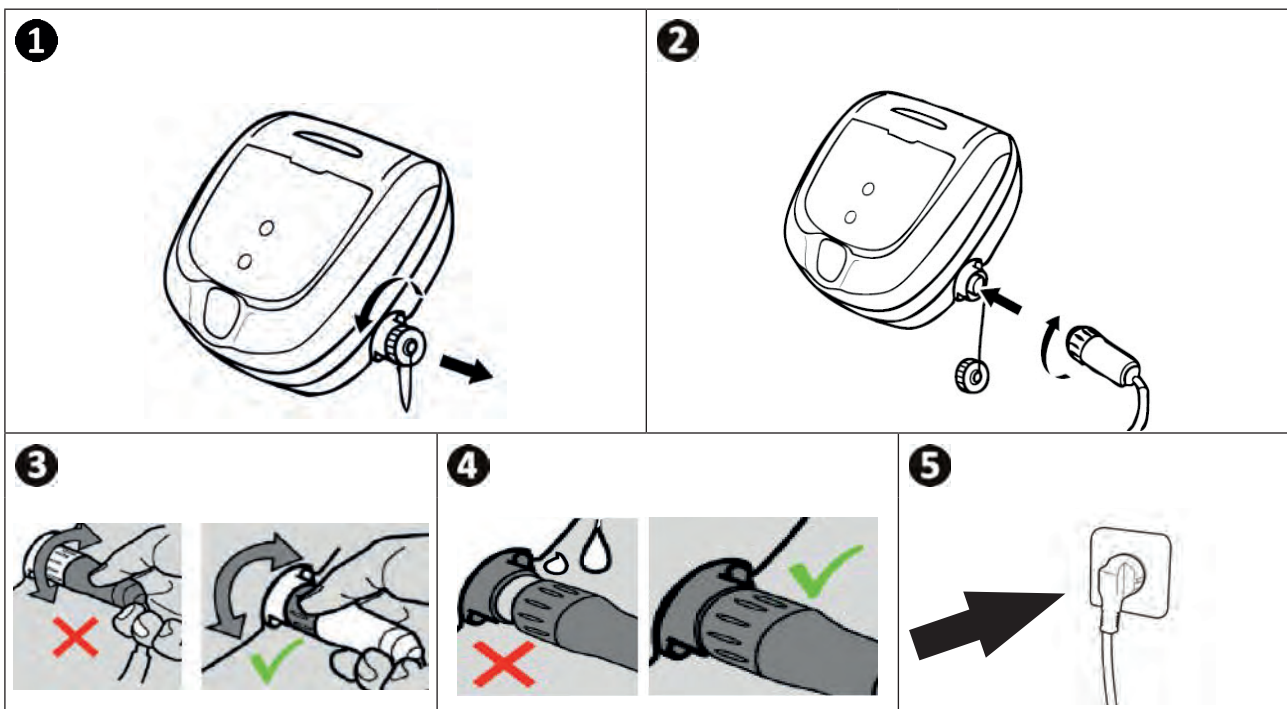

Tip: positioning the unit for better operation


Place the control box in the centre of the pool's length, following the safety conditions relating to the electrical connection.

▶ 3.5 I Starting the cleaning cycle



- Bathing is prohibited when the appliance is in the pool.
- Do not use the appliance during shock chlorination.
- Do not leave the appliance unattended for an extended period.
- Do not use the appliance if the roller shutter is closed.

3.5.1 Launching the cleaning cycle

- Press and release , the LED lights up.
- The appliance starts the cleaning cycle in bottom only or bottom / walls mode (depending on the model).




Tip to improve cleaning performance

Regular use of the cleaner (without exceeding 3 cycles per week) means that your pool will always be clean and the filter less clogged.

3.5.2 The cleaner rears up during certain rotations


- The more grip on the surface of the lining, the more the robot will tend to rear up.

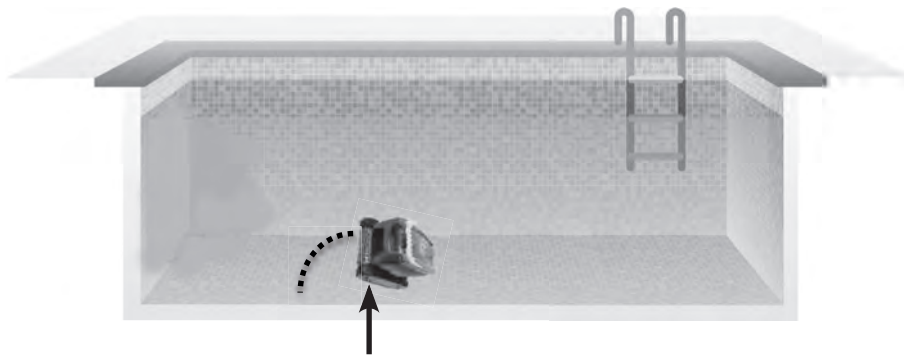


➤ 3.6 I Ending the cleaning cycle



- To avoid damaging the unit, use the cleaner's handle to raise the cleaner and remove it from the pool. Do not pull on the floating cable.
- Take the appliance out of the water each time cleaning is complete.
- Do not leave the appliance to dry out in sunlight after use.
- Store all the elements away from sunlight, humidity and bad weather.

- Once the cycle is complete, the appliance stops and the LED on the control box switches off.
- To stop the appliance during cleaning, press ; the LED goes out.
- Carefully pull on the floating cable to bring the robot to the edge of the pool.
- When the cleaner is within arm's reach, pick it up by the handle and lift it gently out of the pool so that the water it contains drains into the pool (see image **1**).
- Place the cleaner on the ground or vertically at the location provided on the caddy (available as an optional extra) for it to dry out quickly. Then store it with the control box away from sunlight and any splashes.

1

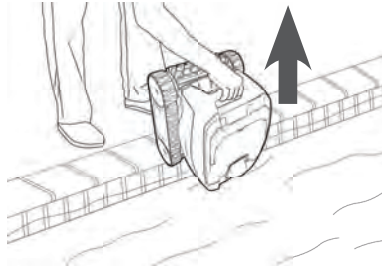

Tip to prevent the floating cable from becoming tangled

The appliance's behaviour is strongly impacted by the tangling of the cable. A cable that is correctly untangled will guarantee better coverage of the pool.

- Untangle the cable and lay it out in the sun so that it returns to its original shape.
- Then wind it up carefully and place it on the caddy handle (available as an optional extra) or on a fixed support.



4 Maintenance

- The appliance must be cleaned regularly using clean or slightly soapy water. Do not use solvents.
- Rinse the appliance thoroughly with clean water.
- Do not let your appliance dry in the sun by the pool.




Tip: replace the filter and the brush every 2 years

You are encouraged to change the filter and the brush every 2 years to preserve the integrity of the appliance and guarantee optimum performance.

4.1 I Cleaning the filter



- The cleaner's performance may be reduced if the filter is full or dirty.
- Clean the filter with fresh water after each cleaning cycle, or several times per cycle depending on the state of the pool (for example on recommissioning).

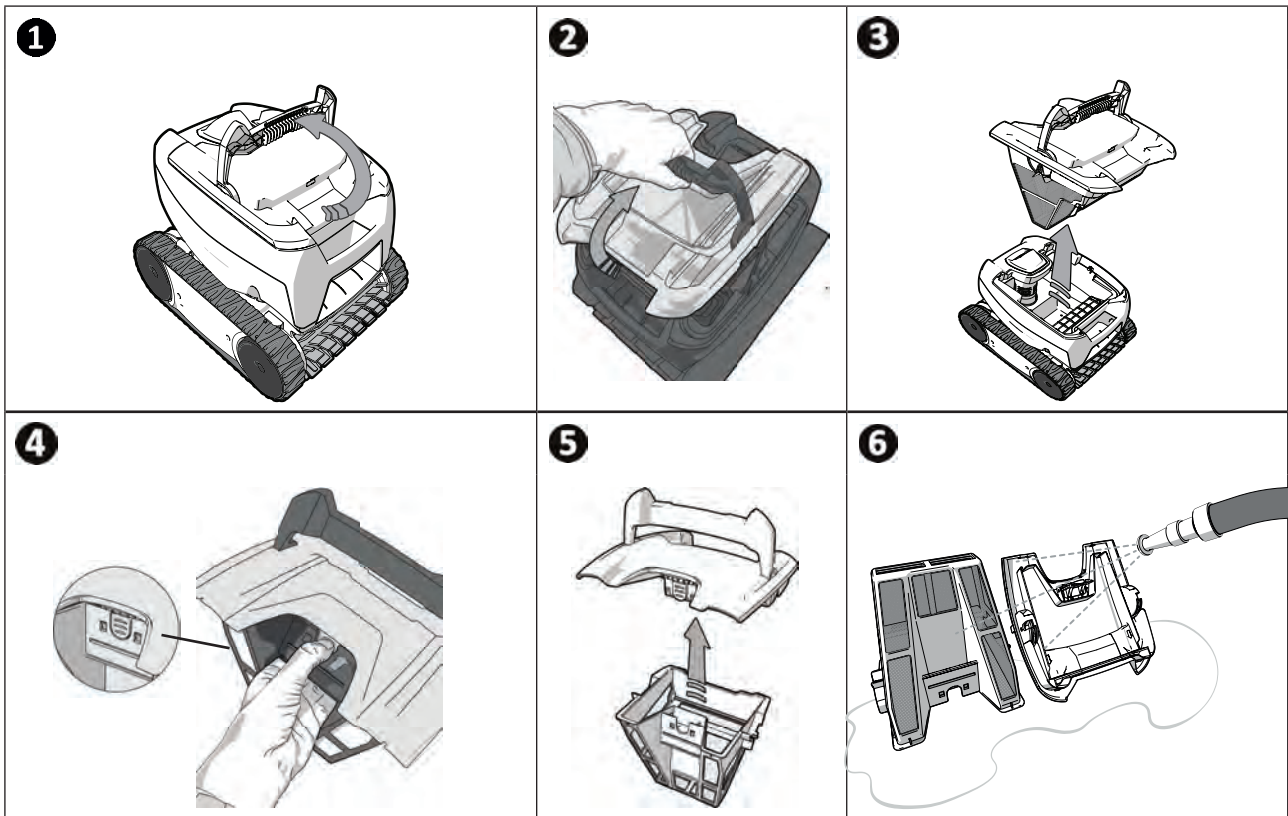

Tip: If the filter is clogged

Clean the filter with an acidic solution (such as spirit vinegar) at least once a year. The filter may clog if not used for several months (winterising period).

4.2 I Cleaning the propeller

To avoid serious injury:




- Disconnect the cleaner from the power supply.

- Wear gloves when handling the propeller




- Remove the filter using the handle (see image 1).
- Remove the external flow guide by lifting it so as to clear the clips (see image 2).
- Upon first removal, you will notice that the internal flow guide is securely tightened, which is why we recommend inserting a screwdriver into the holes to loosen it by turning the screwdriver in the anti-clockwise direction (see image 3).
- Once the internal flow guide has been loosened, unscrew it by hand (see image 4).
- Remove the internal flow guide (see image 5).
- Put on a pair of gloves and pull the propeller, holding it firmly to take it out (see image 6).
- Remove any debris (leaves, stones, etc.) which may be blocking the propeller (see image 7).

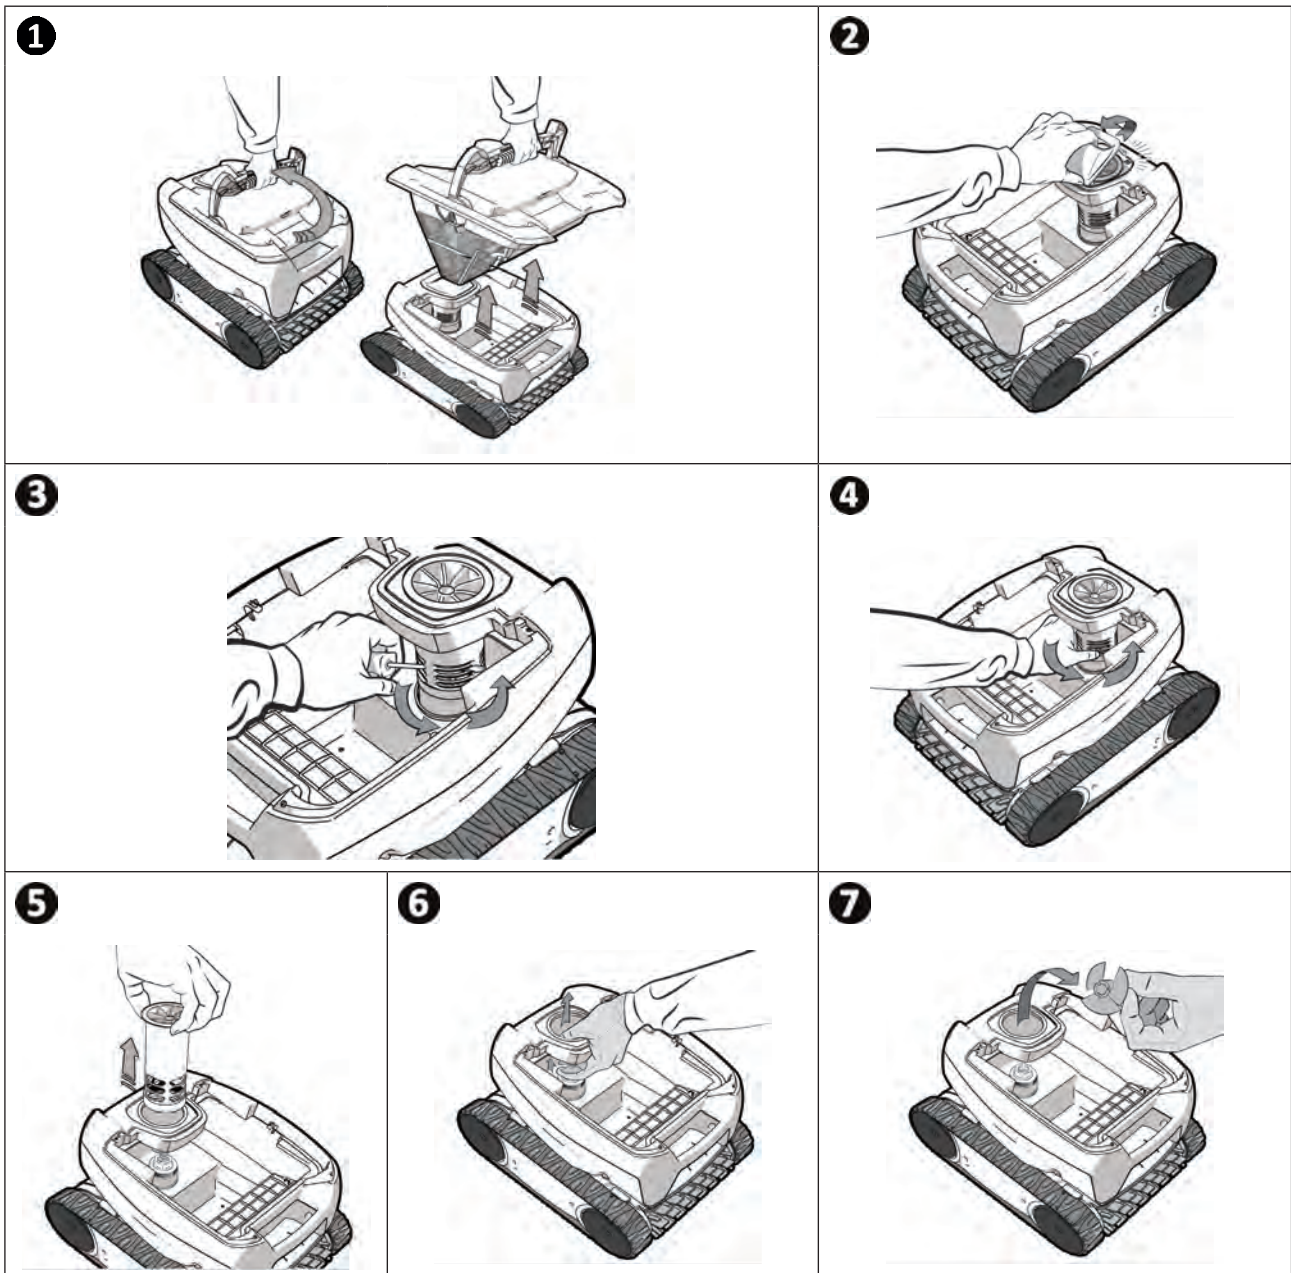


► 4.3 I Replacing the brush

- The brush is equipped with wear indicators; the distance between the indicators and the end of the brush indicates whether the brush is in good condition (see image ①).
- The brush is worn and should be replaced when the wear indicators appear as shown in image ②.
- To remove the worn brush, remove the tabs from the holes in which they are fixed (see image ③).
- To fit the new brush, start by fitting the side without tabs under the brush holder (see image ④).
- Roll the brush around its support, slide the tabs into the attachment holes and pull on the end of each tab until its edge passes through the slit (see image ⑤).
- Cut the tabs using a pair of scissors for them to be below flap level (see image ⑥).

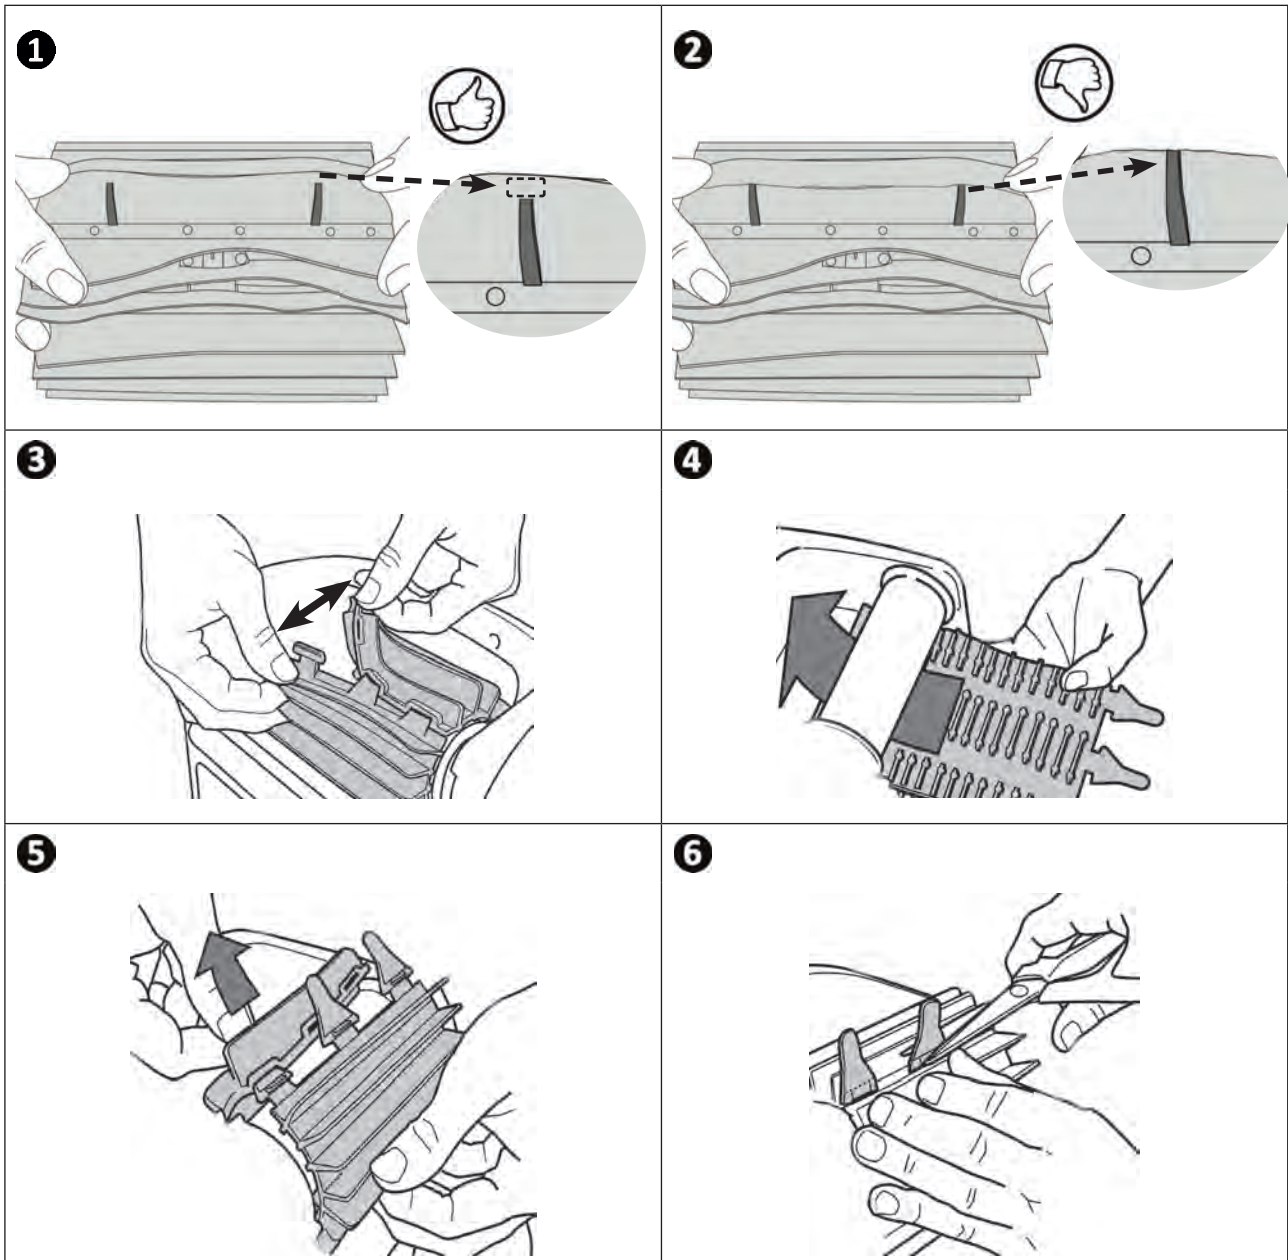

➤ 4.4 I Replacing the tracks

- Place the cleaner on its side (see image **1**).
- Starting with one of the wheels, pull on the inside of the track to separate it from the wheel (see image **2**). Then remove the track from the cleaner.
- To install the new track, position the inside of the track on the first wheel's grooves.
- Stretch the track around the second wheel. Press down on the track to position it correctly on the wheel grooves.
- Make sure that the track passes under the guides.

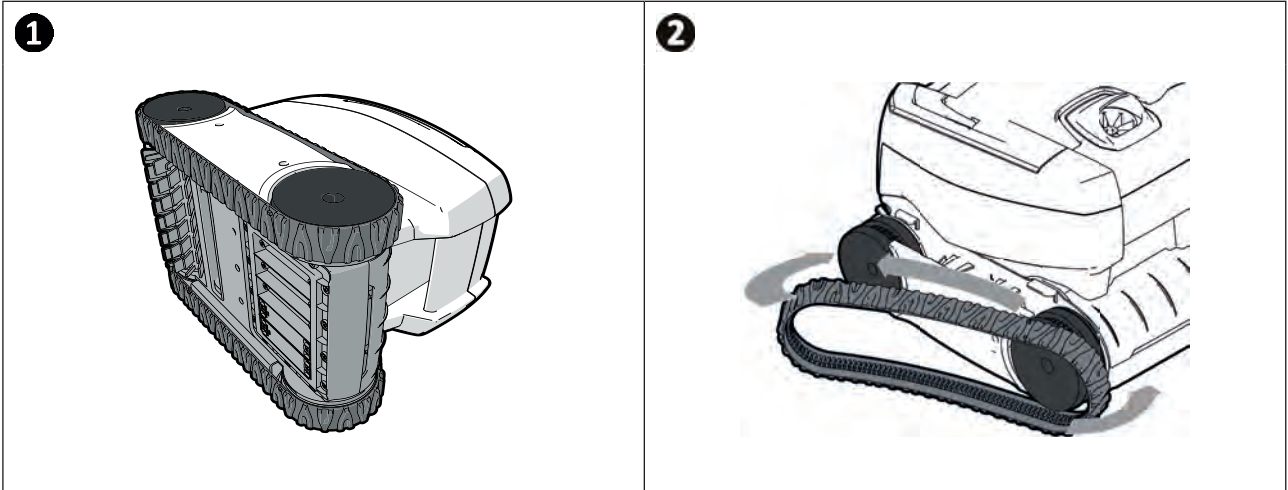


EN








5 Troubleshooting


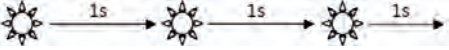 

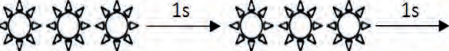 



- If a problem occurs, before you contact your retailer, please carry out these few simple checks using the following tables.
- If the problem continues, contact your retailer.
-  : Actions to be performed by a qualified technician only

5.1 I Appliance behaviour

<p>When the cleaner moves forward in a straight line, it is no longer flat on the floor. (To run on the bottom of the pool, it is normal for the front of the cleaner to rise)</p>	<ul style="list-style-type: none"> • There is still air in the appliance's casing. Repeat the cleaner immersion operations (see § "3.3 Immersing the cleaner"). • The filter is full or dirty: simply clean it. • The propeller is damaged, contact your retailer 
<p>The cleaner does not or no longer climbs the pool sides as it originally did. (Its electronic programme means that the cleaner does not systematically climb the walls).</p>	<ul style="list-style-type: none"> • The filter is full or dirty: simply clean it. • The filter is clogged: clean it with an acidic solution (spirit vinegar, for example), or replace it where necessary. • Even though the water seems clear, microscopic algae are present in your pool, they are not visible to the naked eye, and they make the sides slippery and prevent the cleaner from climbing. Carry out shock chlorination and slightly reduce the pH. Do not leave the cleaner in the water during shock treatment. <p>If the problem continues contact your retailer </p>
<p>The cleaner does not move on start-up.</p>	<ul style="list-style-type: none"> • Check that the outlet to which the control box is connected is receiving a power supply. • Check that the cleaning cycle has been launched and that the light is on. <p>If the problem continues contact your retailer </p>
<p>The cable gets tangled</p> <p>The cleaner doesn't clean the entire pool</p> <p>The cleaner's discharge nozzles become blocked</p>	<ul style="list-style-type: none"> • Check that you place as much of the floating cable as possible in the water. • Stop the filtration pump and begin a new cleaning cycle. • Place the control box in the centre of the pool's length, following the safety conditions, see "3.4 I Electricity supply connections". If cleaning is not optimal, vary the location of the control box and the place at which the cleaner enters the pool.
<p>The control box does not respond to any button presses</p>	<ul style="list-style-type: none"> • Unplug the cable from the mains socket, wait 10 seconds and plug it back in again.
<p>The robot does not tilt upwards to climb the walls</p>	<ul style="list-style-type: none"> • The brush is worn: check the wear indicators "4.3 I Replacing the brush" and that the brush is properly attached to its brush support. Replace the brush where necessary. • The pool is tiled with a right angle between the bottom and the walls: the brush may require adaptation to optimise cleaning: contact your retailer 
<p>The cleaner climbs the walls slowly and stops under the water line</p> <p>The cleaner climbs the walls quickly and goes past the water line, aspirating air</p>	<ul style="list-style-type: none"> • The cleaner may behave differently depending on the lining of the pool. A parameter may require changing. To do this, contact your retailer 

5.2 I User alerts

Flashing LED: 	Solutions
	<ul style="list-style-type: none"> • Check that the cleaner is correctly connected to the control box. If necessary, unplug it and reconnect it following the appropriate procedure.
	<ul style="list-style-type: none"> • Check that there is nothing preventing the brush and support from turning. To do so, raise the tracks to check that there are no external elements jammed in a housing.
	<ul style="list-style-type: none"> • Cleaner operating outside the pool. Make sure you start the cleaner when it is in the water (see § “3.3 Immersing the cleaner”). • Check that there are no stones or hair in the propeller (see § “4.2 I Cleaning the propeller”). • Clean or change the filter if necessary.

 **Tip: if you require assistance, inform your retailer about the appliance's condition to save time**
Provide this information to your retailer

Votre revendeur
Your retailer

Modèle appareil
Appliance model

Numéro de série
Serial number

Trouvez plus d'informations et enregistrez votre produit sur
More informations and register you product on

www.zodiac-poolcare.com

