

Installation

For Ultimate Border by ELBEblue line®

MANUAL



a brand of



ULTIMATE BORDER™

Made in Germany

www.ELBEpools.com

Table of Contents

A Introduction	1
1 Empty the swimming pool	2
2 Welding test	2
3 Cleaning	2
4 Cutting the border	3
5 Drawing the borders	3
6 Fasten the tape	4
7 Fixing the border on the pool wall	5
8 Welding the border on the pool wall	5
9 Filling the swimming pool	6
Contact info	Back Cover

A Introduction



ELBEblue line®, a trademark of Elbtal Plastics, offers **Ultimate Border**, a complete solution for protecting the swimming pool water line from discoloration.

Our unique surface coating is suitable for swimming pool renovation and new construction of swimming pools, as well. As with all of our projects, **Ultimate Border** is “Made in Germany” and is of premium quality.



1 Empty the Swimming Pool

Empty the waterline to 10-20 cm. This will give you the needed tension on the reinforced membrane to guarantee prevention of wrinkles. Wrinkles would disturb the working process of Ultimate Border.



Please note industrial safety requirements for the following steps:

2 Welding Test (only required for renovations)

We recommend a welding test to be sure that the reinforced pool membrane is in good condition to be welded.

3 Cleaning of the Membrane


The reinforced membrane has to be cleaned. We recommend cleaning with alkaline and/or an acidic cleanser, because of pollution. Repeat this step until the surface is absolutely clean.

A careful cleaning is required.



4 Cutting the Border

Once the membrane is thoroughly cleaned, measure the border and cut it according to the dimensions of the pool. Note that the border will not overlap at corners. **We recommend an exact measure from pool corner to pool corner.**

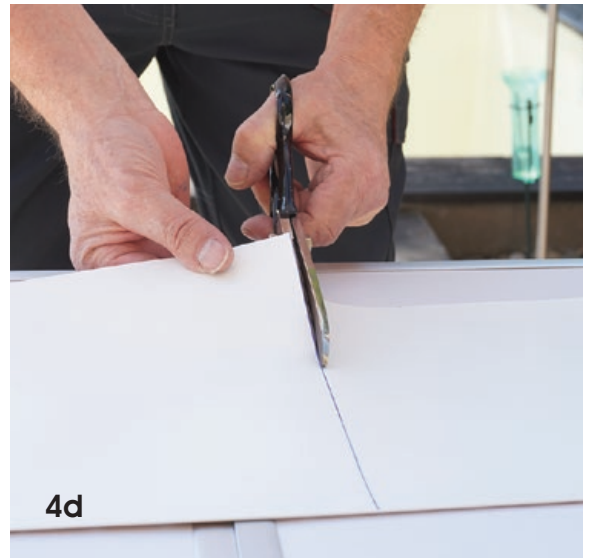


5 Drawing the Borders on the Back Side

Once the borders are cut, mark the back side of the border. Draw the lines horizontally and vertically 4 cm from the border edge. **Please note: Do not use a permanent marker.**



6 Fasten the Tape

Fasten the tape on the back side of the border, working away from your line toward the center of the membrane from the top, bottom, left and right sides. Stay below the 4 cm vertical and horizontal marks, because they will be used in welding. **For correct installation use only our Ultimate Border fixing tape.**

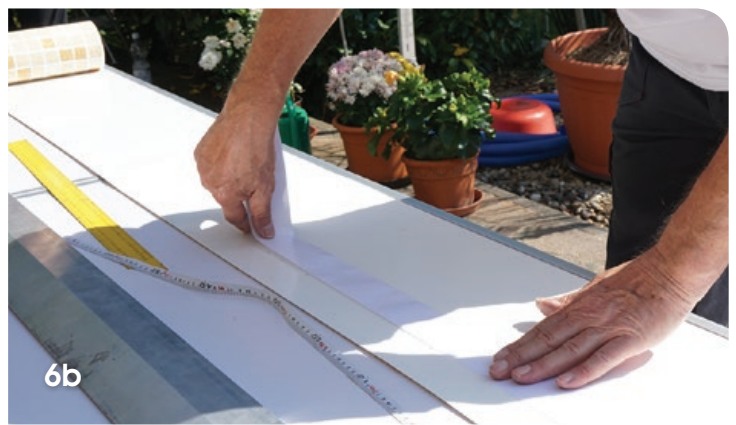

7 Fixing the Border on the Pool Wall



Get the border into the desired position and fix it. We recommend 2 people for this work.



8 Welding the Border on the Pool Wall

Use the hot air welding tool to install the border on the pool wall. Weld it along the horizontal and vertical marked areas. (see step 5)



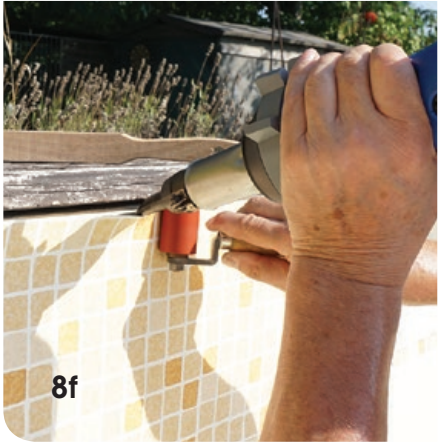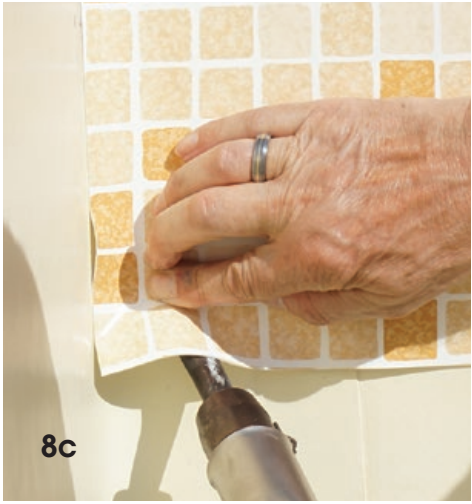

9 Filling the Swimming Pool

After finishing these steps, the pool can be refilled with water.



ULTIMATE **BORDER**TM

With **Ultimate Border** you will never have problems with your waterline again.

For further information please contact us or visit our homepage.

www.ELBEpools.com | sales@elbtal-plastics.de




ULTIMATE POOL SURFACE

Made in Germany



Scan with your
smartphone or other
mobile device to view
our **installation video**.

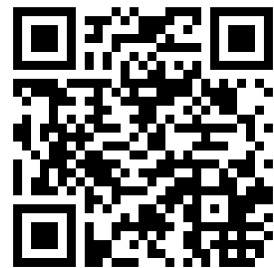

Elbtal Plastics GmbH and CO. KG

Grenzstr. 9
01640 Coswig
Germany

ULTIMATE **BORDER**TM
Made in Germany